


Procedure to change brake pads on 2P caliper ref: EA-03

Dossier ref: MONT_PADS_2
Equipment concern: caliper EA-03

Révision	Description	Date
0	Initial edition	24/02/2009

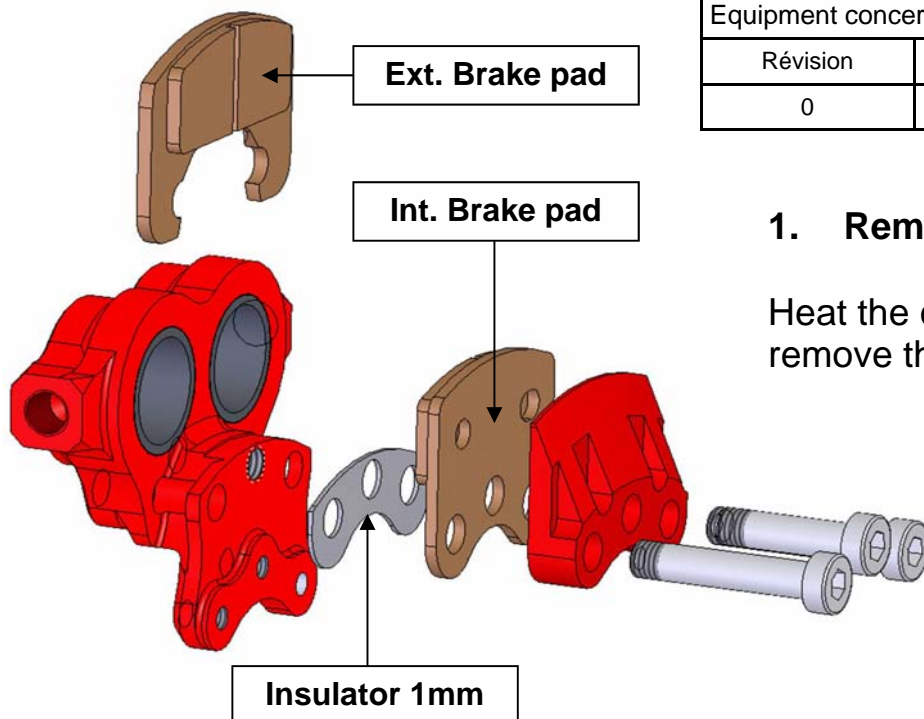

1. Remove the 3 screws M8

Heat the caliper to 60-80°C can help to remove the screws.

2. Clean around the pistons with a dry cloth before pushing back

3. Push back the pistons with one finger (no force is needed).

If you cannot push back the piston with one finger, caliper must be checked and rebuilt.

4. Assemble the pads and back plate with crankcase



Put a drop of blue "Loctite 243" on the end of each screw and all of them
Then torque to **25N.m** each screw (respect of torque value is very important).

Put a drop of white paint between each screw and back plate

**Torque to 25N.m
(220 IN.LBS)**

